

FIG. 1

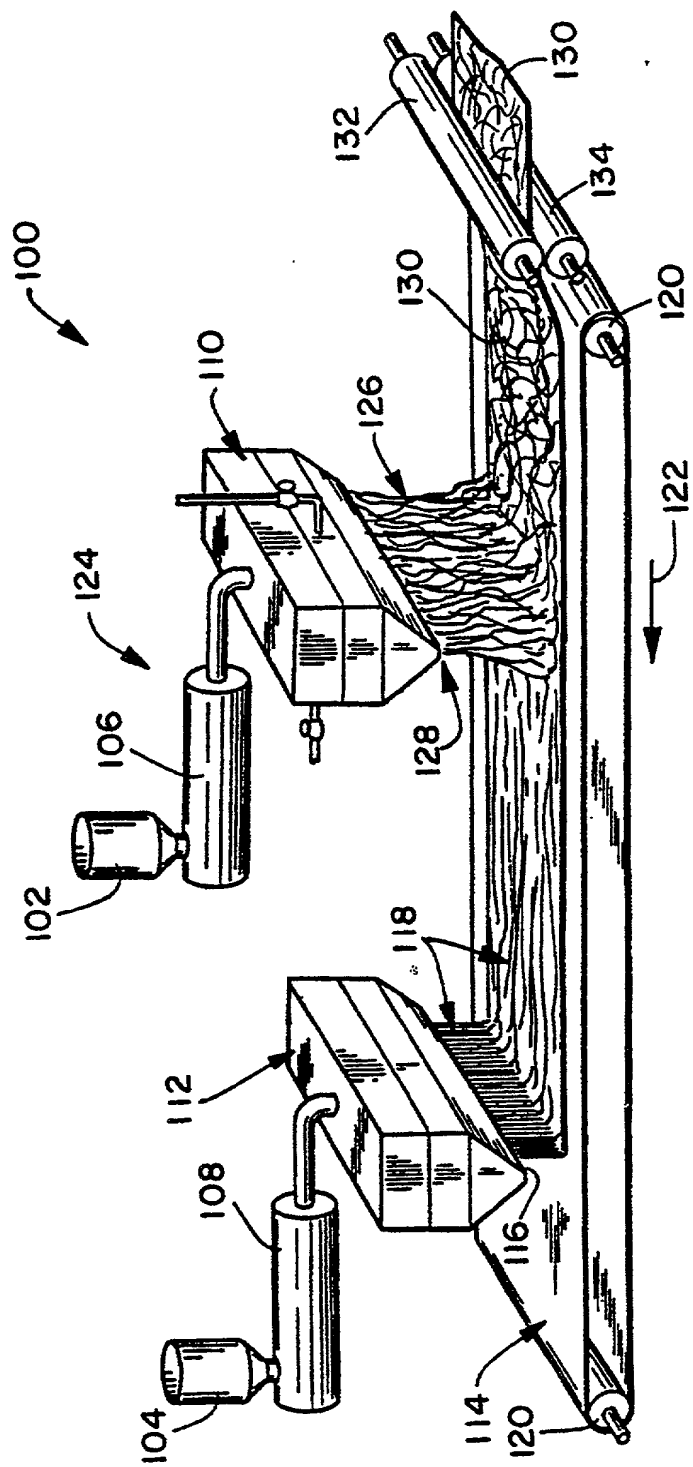


FIG. 2

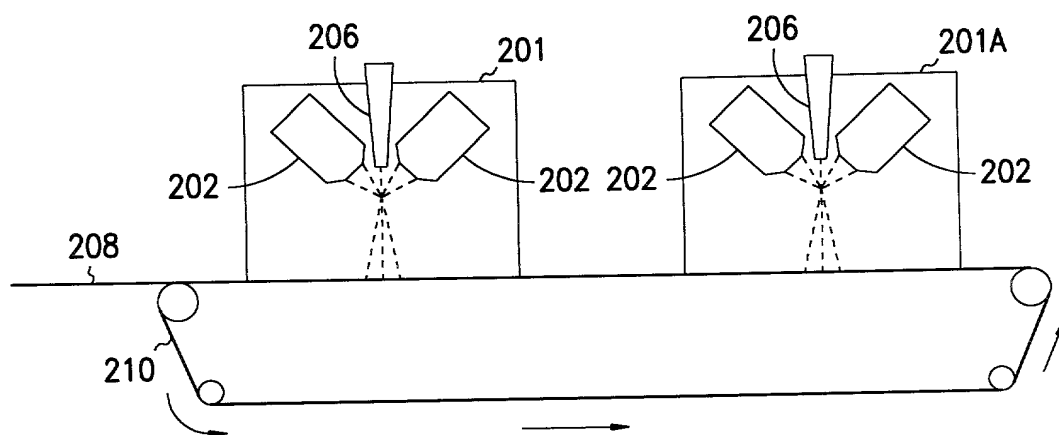


FIG. 3



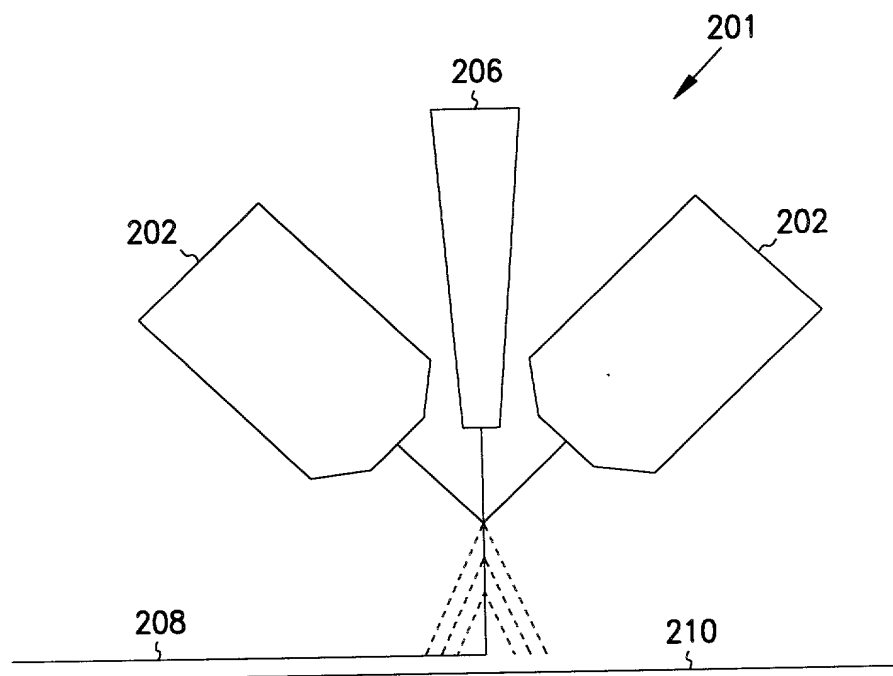



FIG. 3A

Figure 4  
Heat Activation Unit

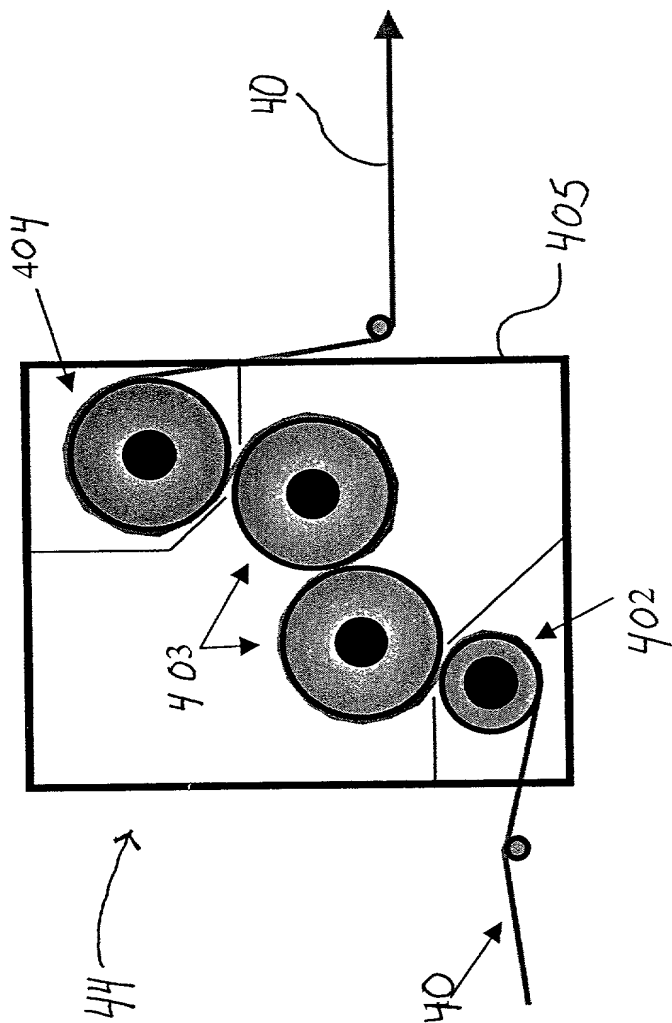


**FIG. 5**

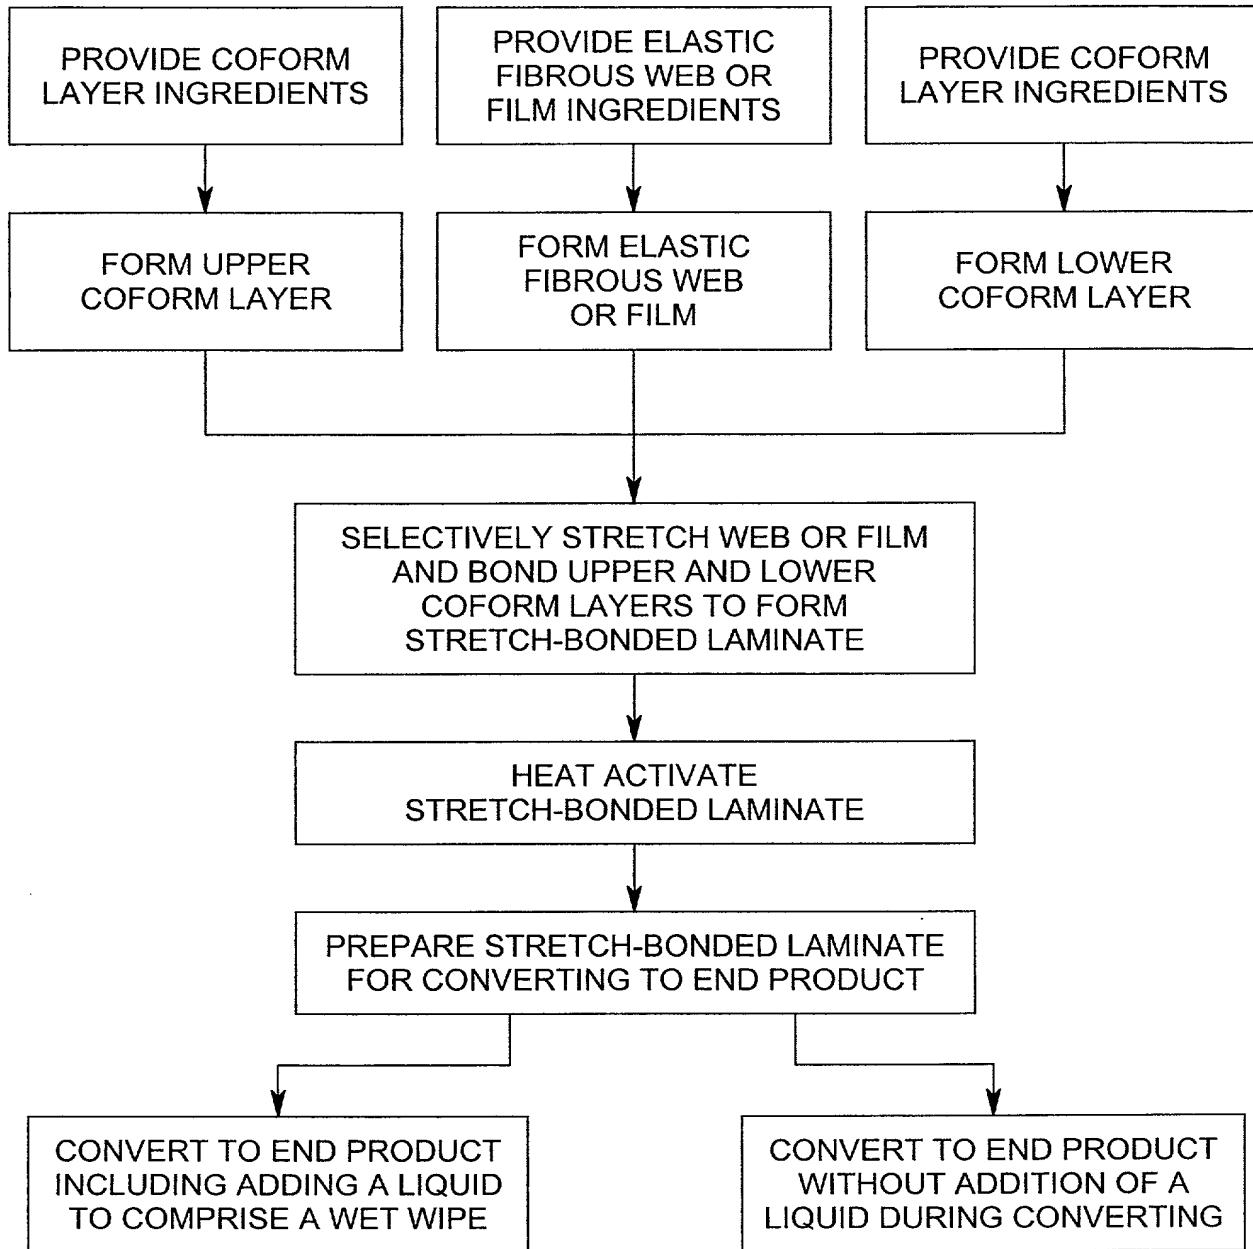


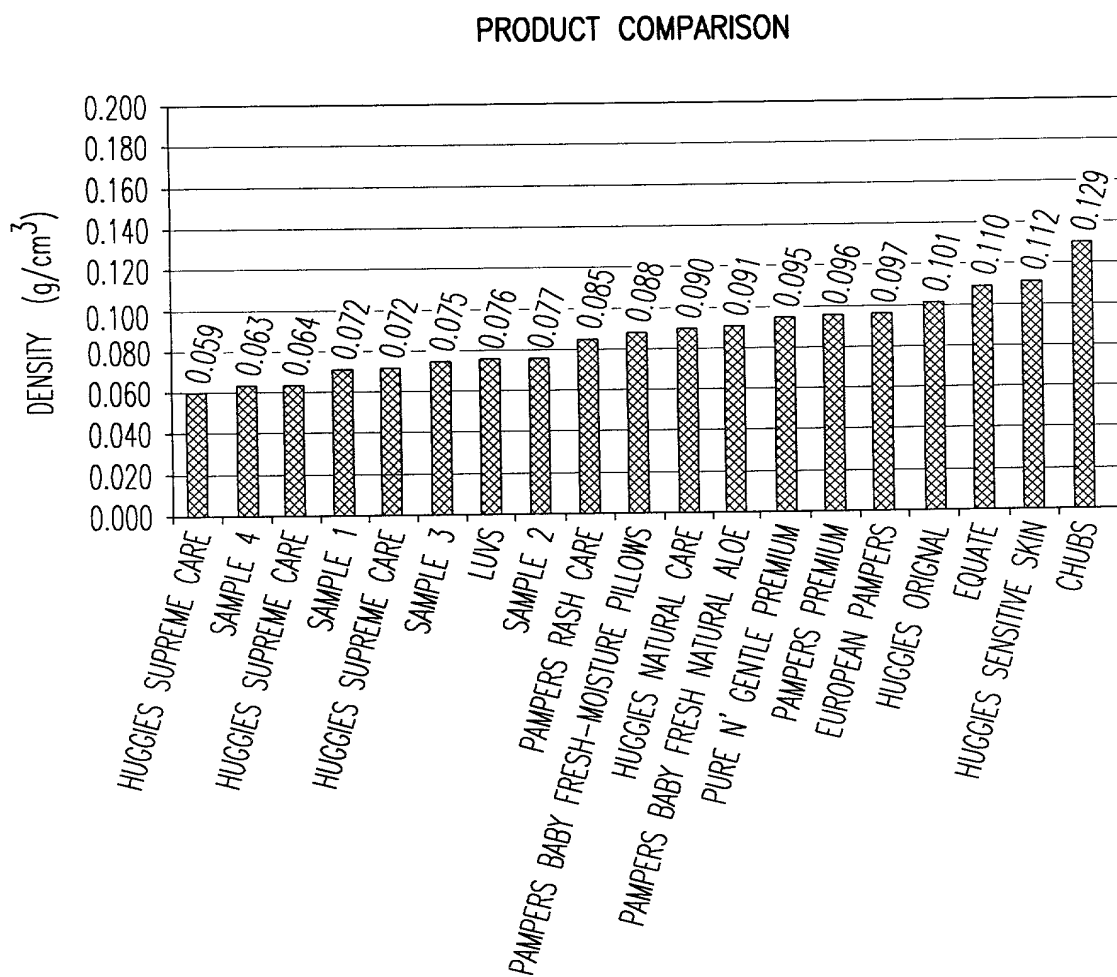

**FIG. 6**

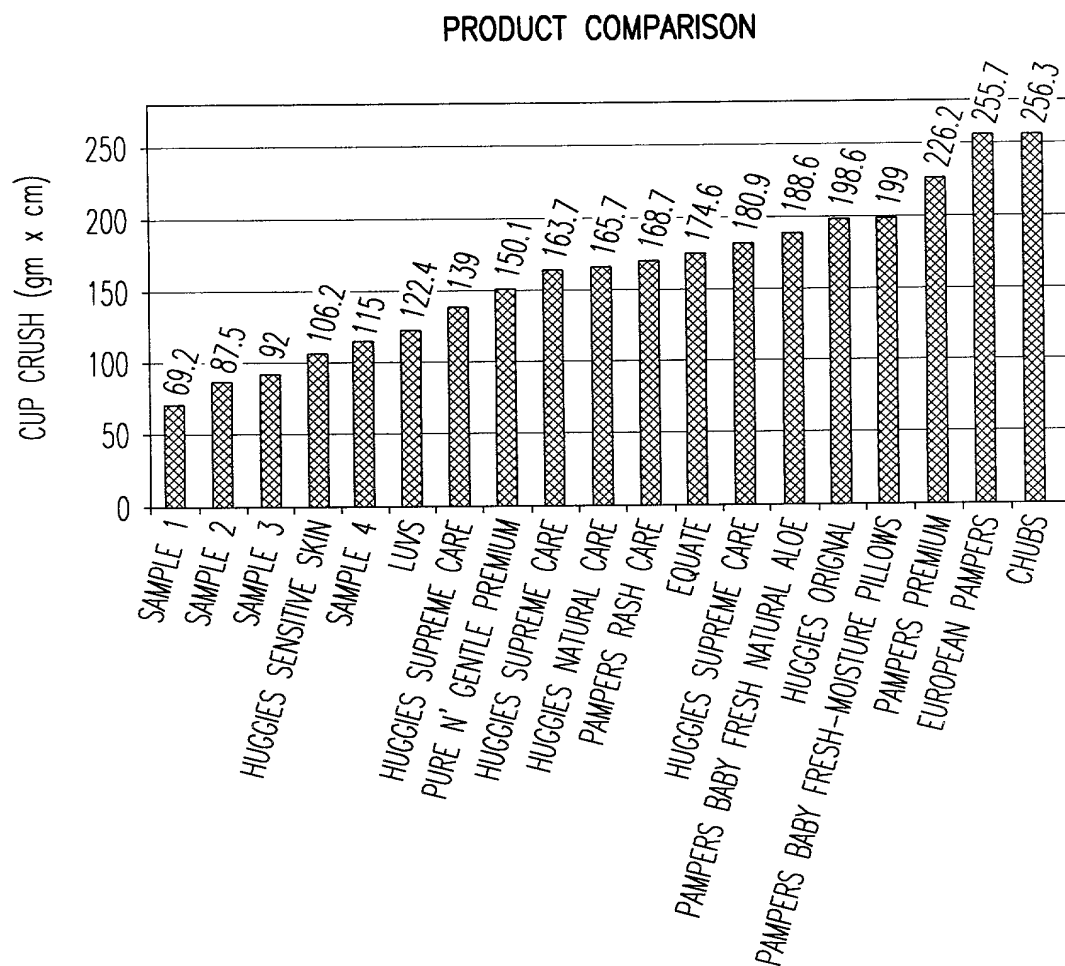


**FIG. 7**

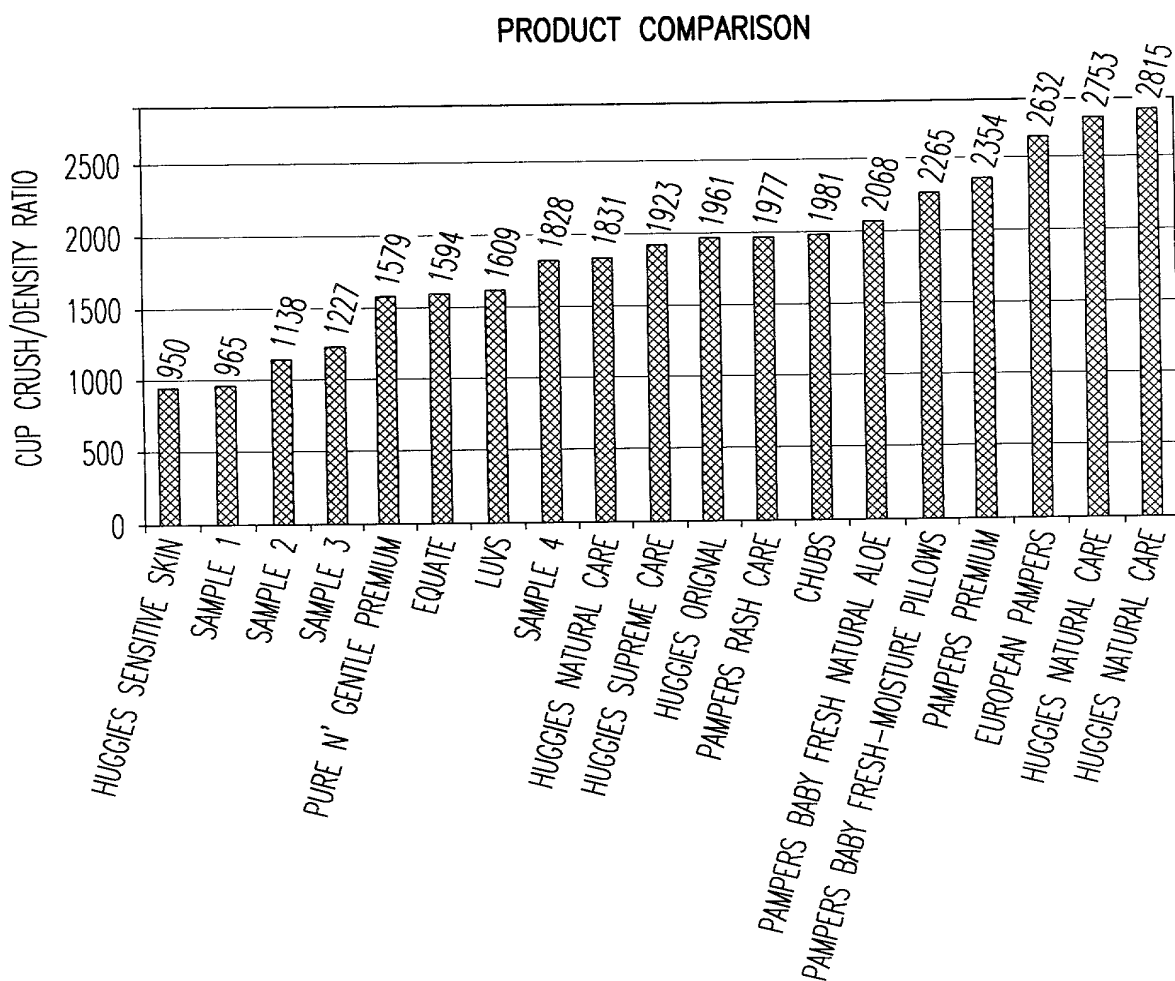


**FIG. 8**



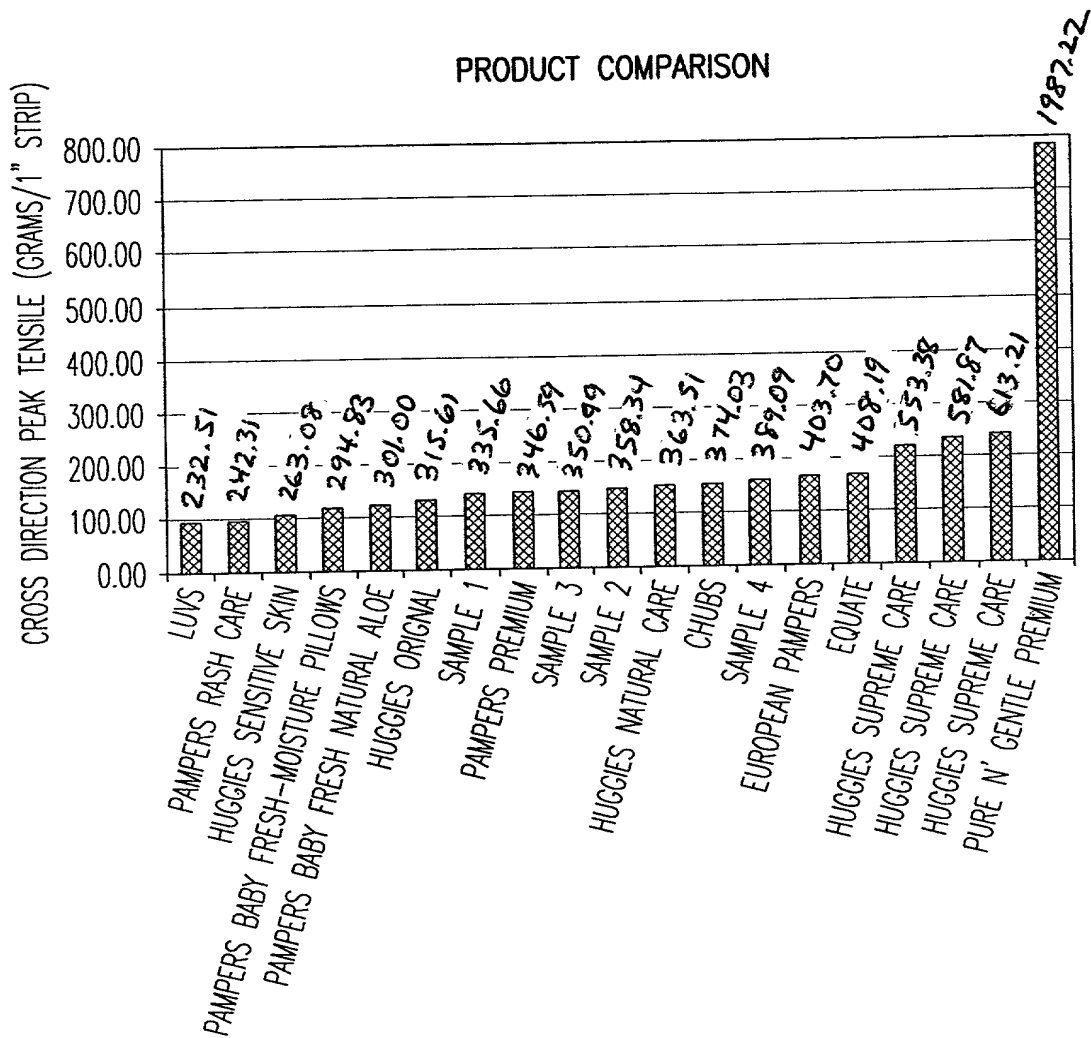

**FIG. 9**

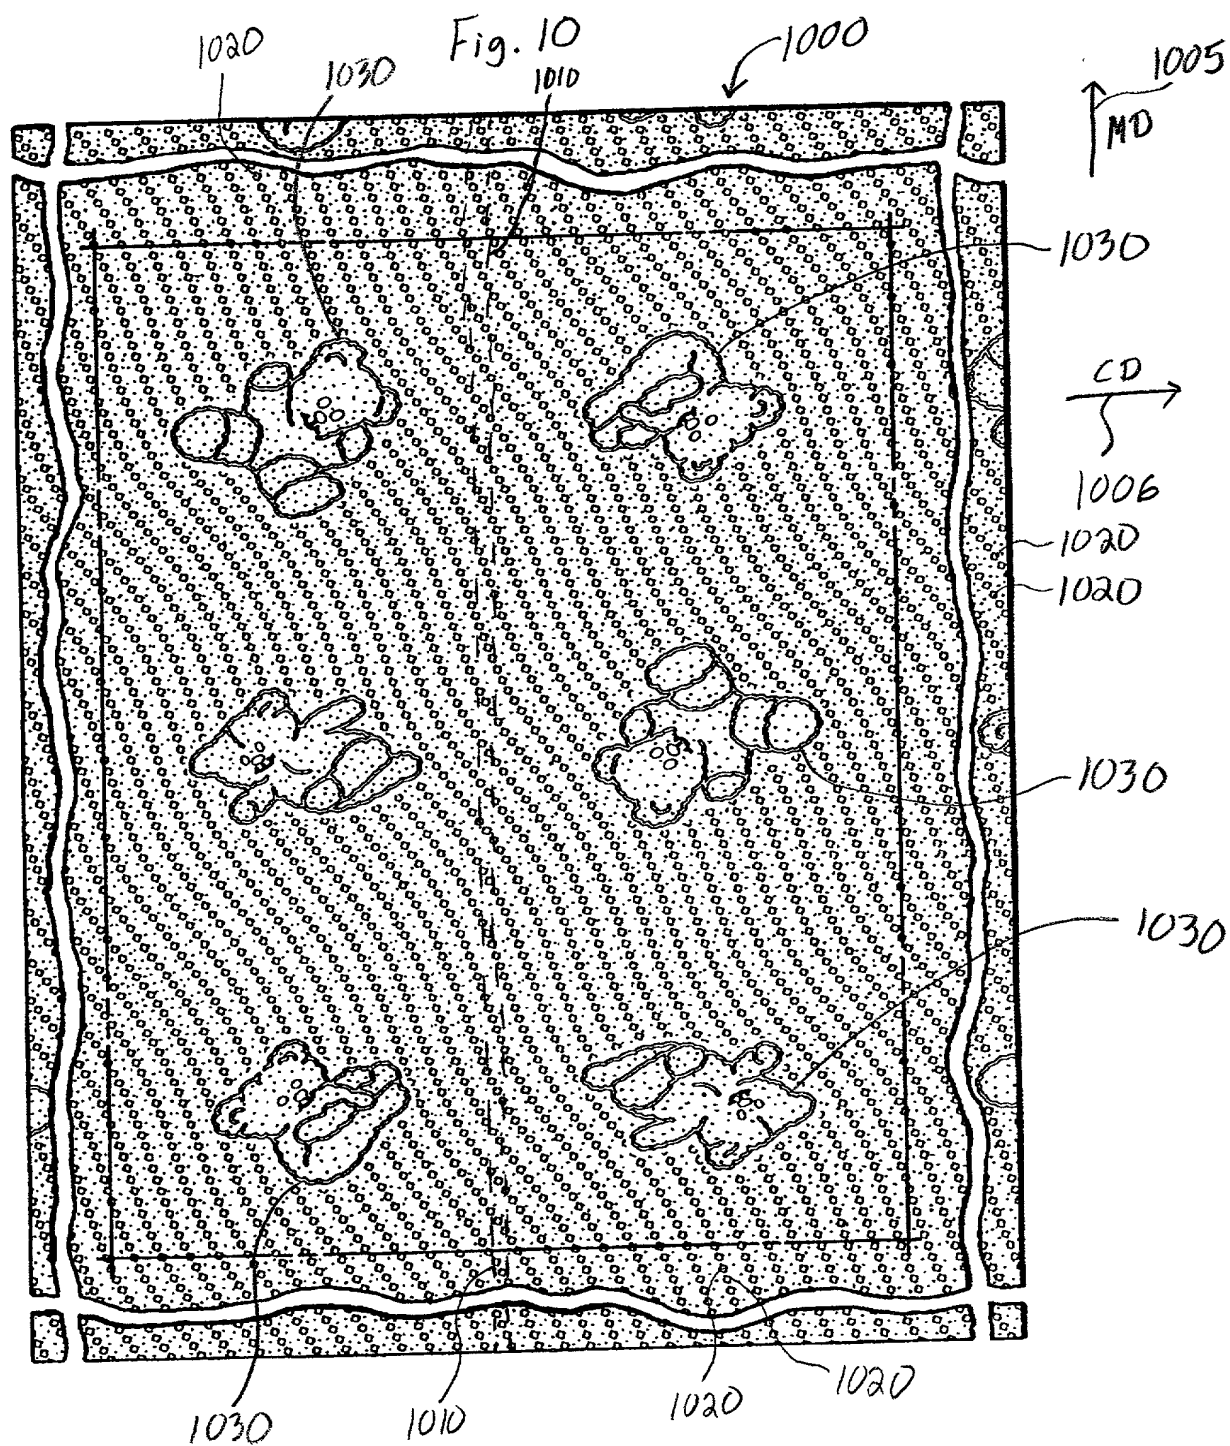

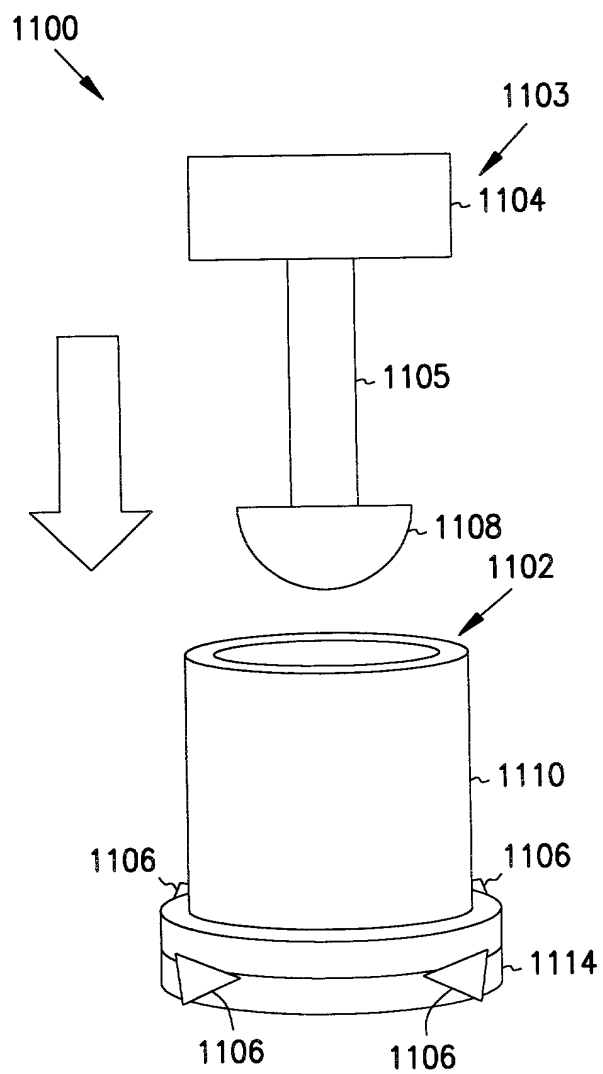


FIG. 11

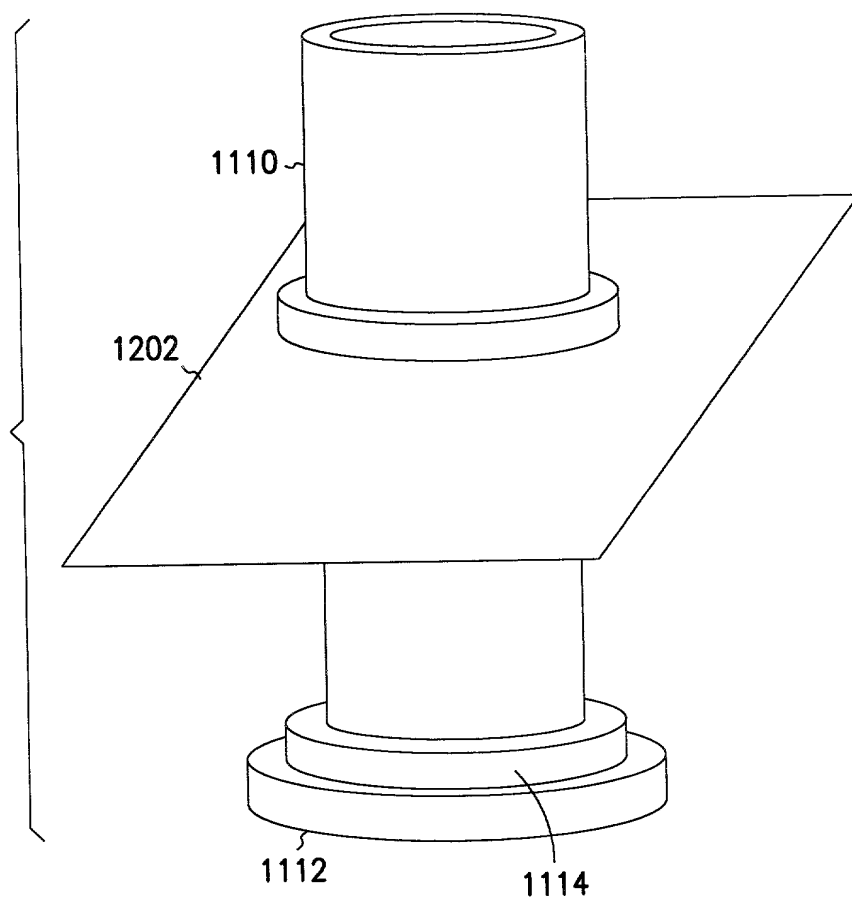


FIG. 12

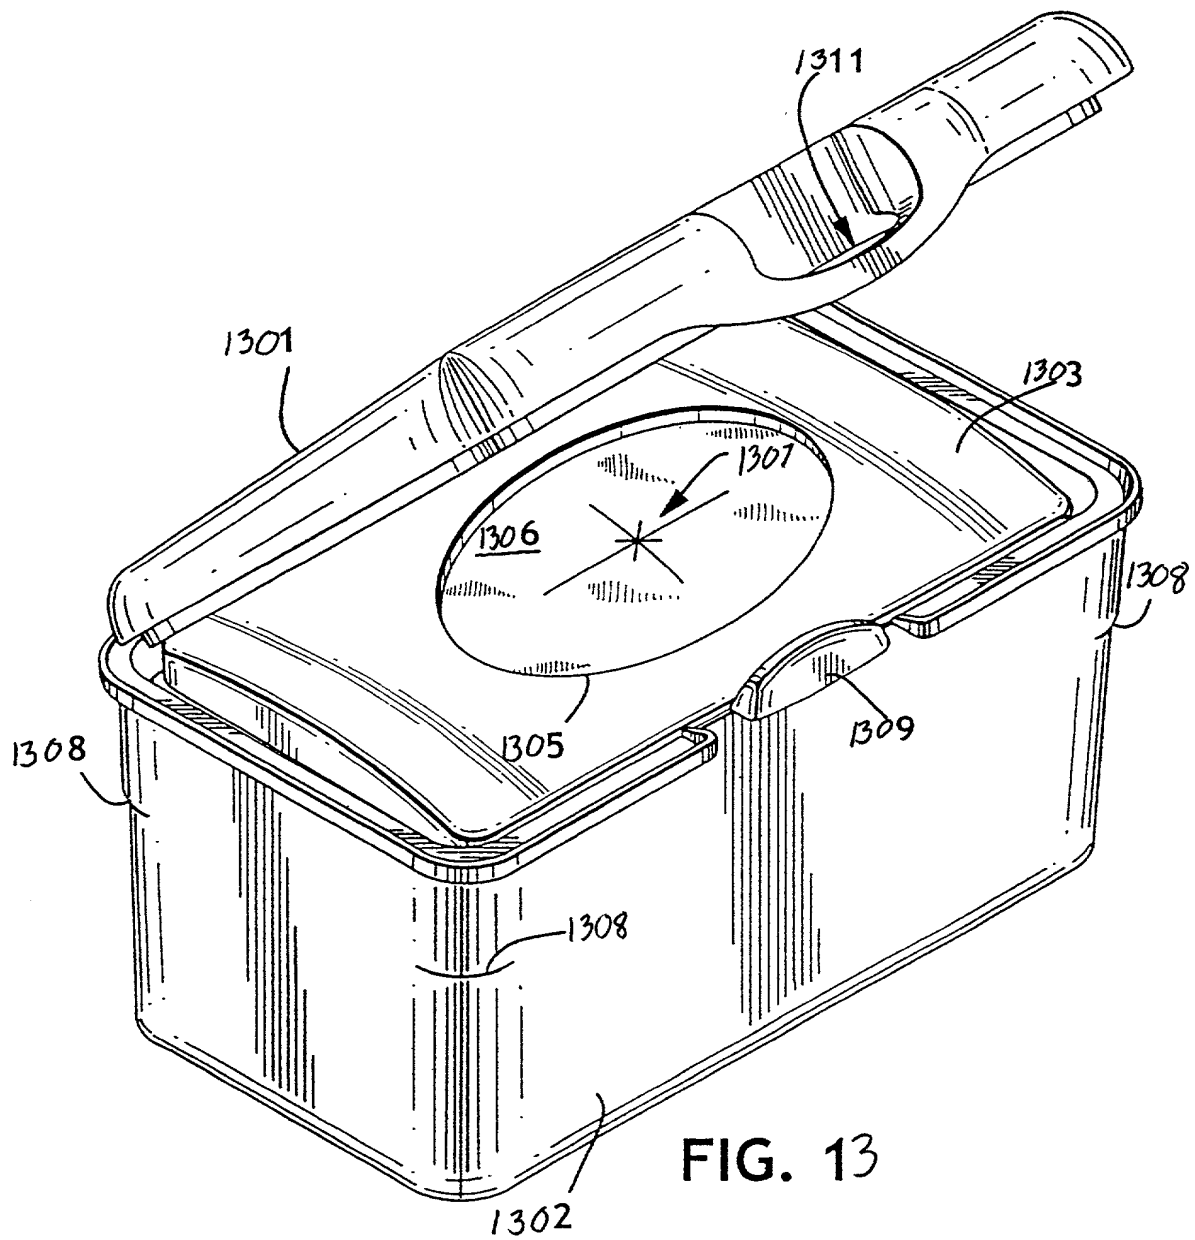


FIG. 13

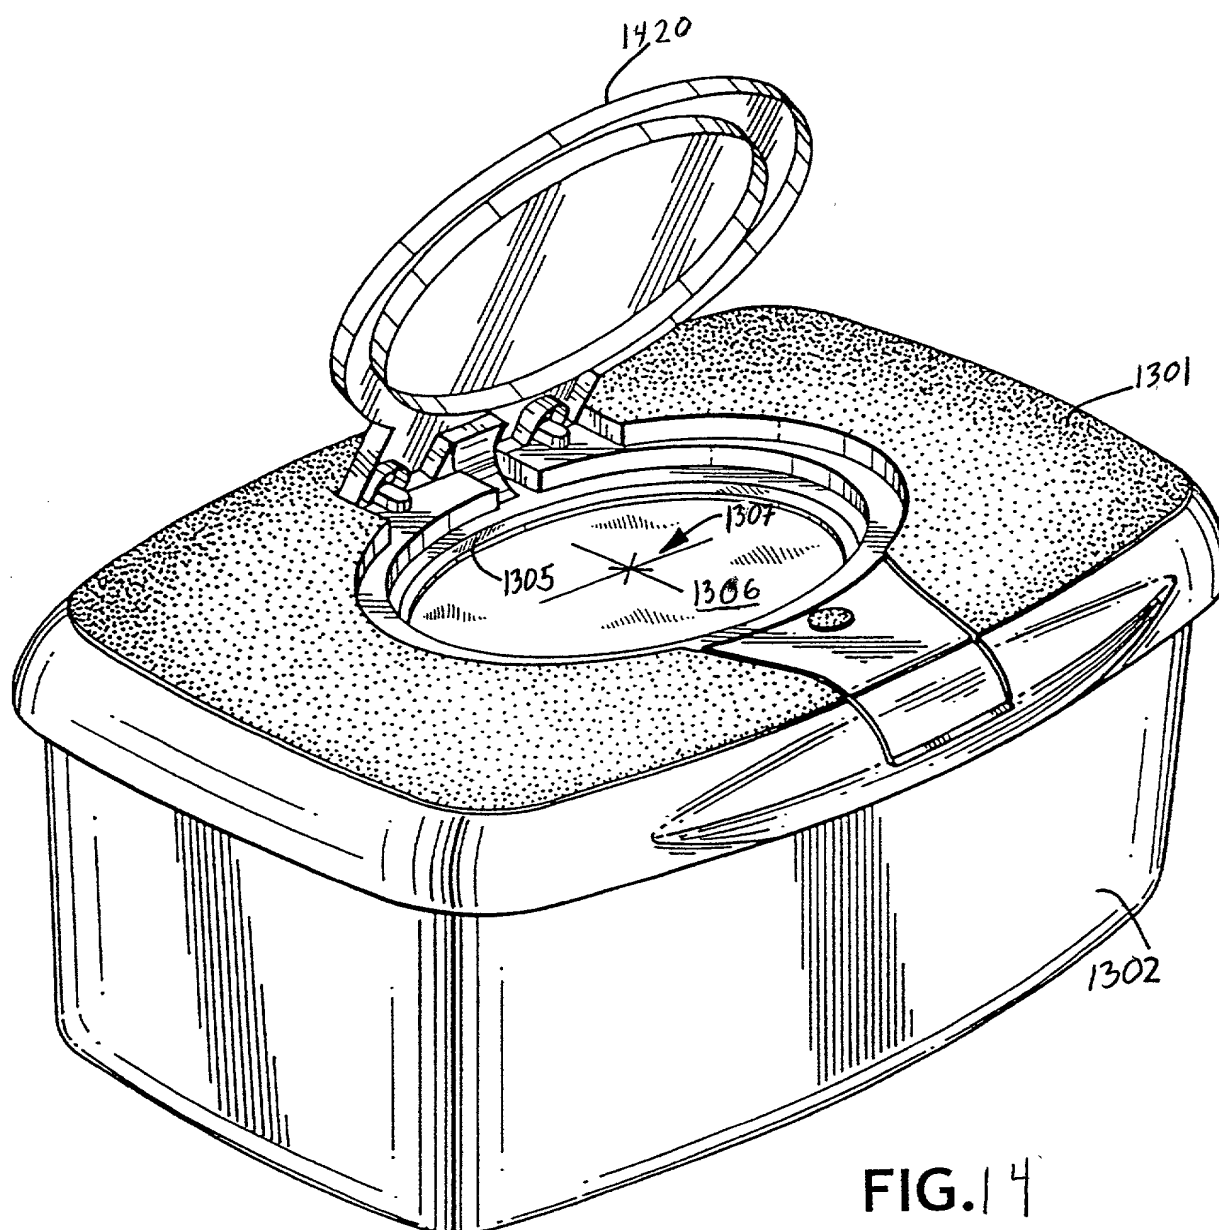


FIG. 14

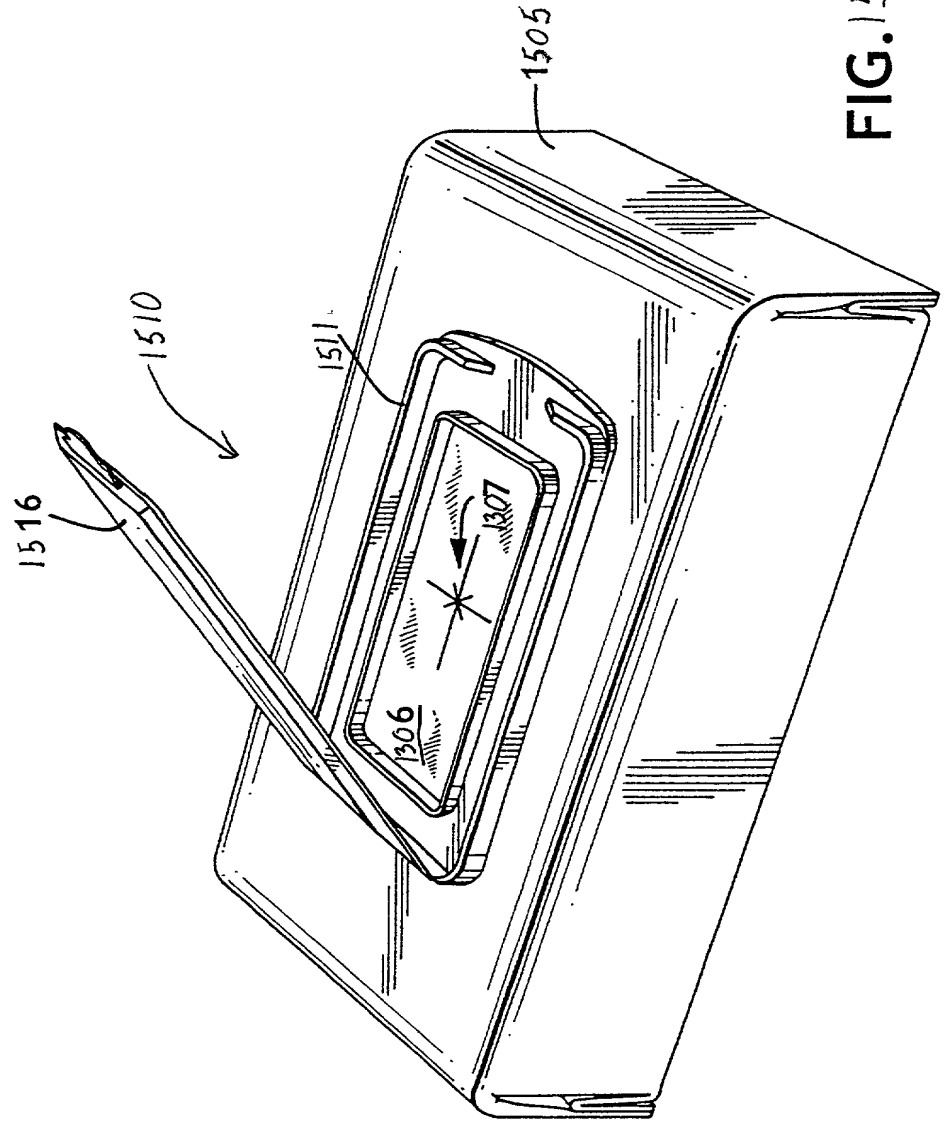


FIG. 15

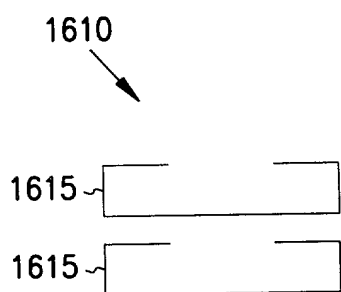


FIG. 16A

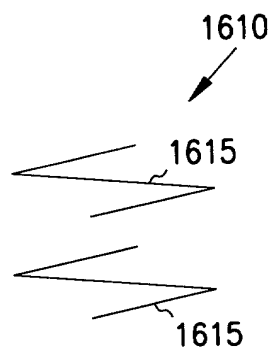


FIG. 16B

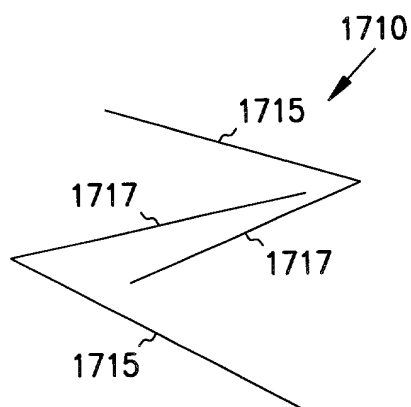


FIG. 17A

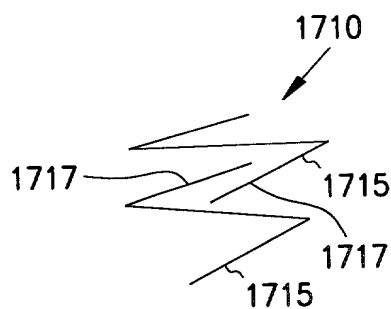


FIG. 17B

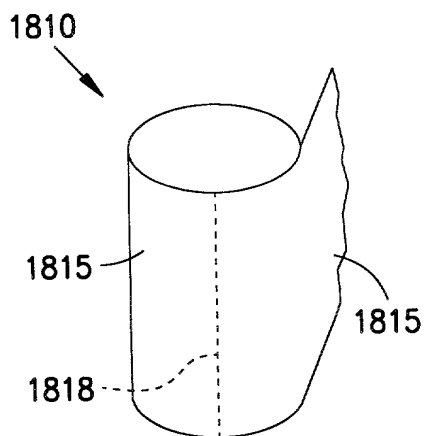


FIG. 18



EFFECT OF DISPENSING ON WET THICKNESS

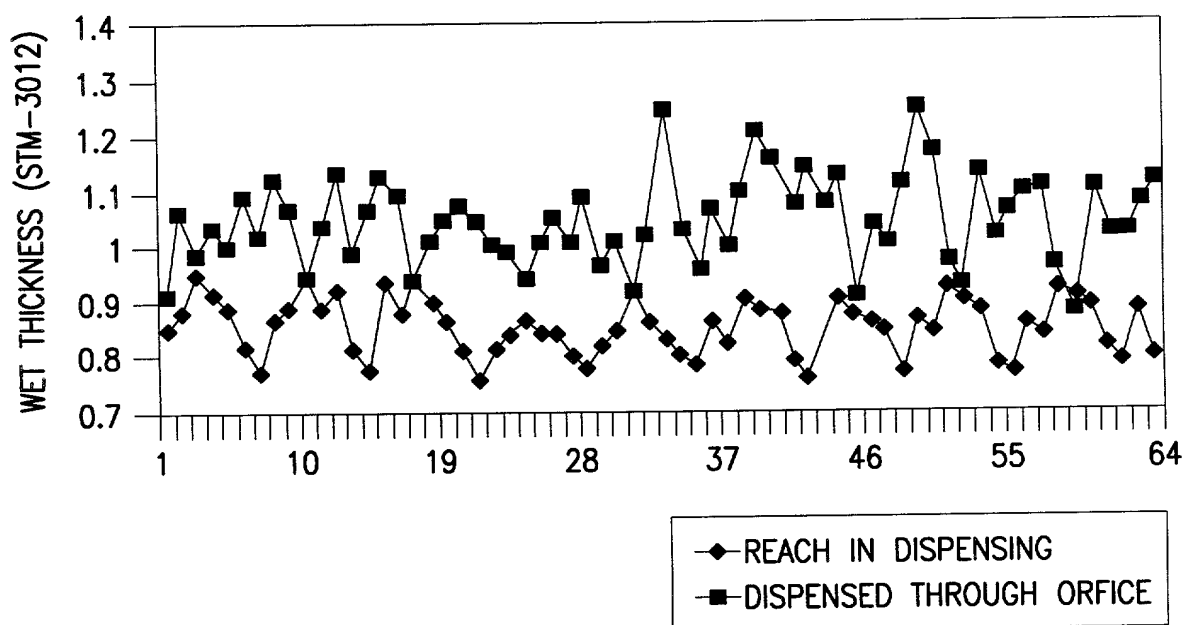


FIG. 19